

KPI OVERVIEW

KPI01	Departure punctuality
Definition	Percentage of flights departing from the gate on-time (compared to schedule).
Mesurement Units	% of scheduled flights
Operations Measure	ed IFR departures of scheduled airlines
Variants	Variant 1A - % of departures within ± 5 minutes of scheduled time of departure
	Variant 1B – % of departures delayed ≤ 5 minutes versus schedule
	Variant 2A – % of departures within ± 15 minutes of scheduled time of departure
	Variant 2B – % of departures delayed ≤ 15 minutes versus schedule
Objects Characterize	edThe KPI is typically computed for traffic flows, individual airports, or clusters of airports (selection/grouping based on size and/or geography).
Utility of the KPI	This is an airspace user and passenger focused KPI: departure punctuality gives an overall indication of the service quality experienced by passengers, and the ability of the airlines to execute their schedule at a given departure location.
Parameters	On-time threshold (maximum positive or negative deviation from scheduled departure time) which defines whether a flight is counted as on-time or not.
	Recommended values: 5 minutes and 15 minutes.
Data Requirement	For each departing scheduled flight:
	 Scheduled time of departure (STD) or Scheduled off-block time (SOBT) Actual off-block time (AOBT)
Data Feed Providers	s Schedule database(s), airports, airlines and/or ANSPs
Formula / Algorithm	At the level of individual flights:
	Exclude non-scheduled departures
	2. Categorize each scheduled departure as on-time or not
	At aggregated level:
	3. Compute the KPI: number of on-time departures divided by total number of scheduled departures

References & Examples of Use

- Comparison of ATM-Related Operational Performance: U.S./Europe (September 2016)
- China / Europe benchmarking study (CAUC EUROCONTROL, 2017)

KP102	Taxi-out additional time
Definition	Actual taxi-out time compared to an unimpeded/reference taxi-out time.
Mesurement Units	Minutes/flight
Operations Measured	d The duration of the taxi-out phase of departing flights
Variants	Variant 1 – basic (computed without departure gate and runway data)
	Variant 2 – advanced (computed with departure gate and runway data)
Objects Characterize	dThe KPI is typically computed for individual airports, or clusters of airports (selection/grouping based on size and/or geography).
Utility of the KPI	This KPI is intended to give an indication of the efficiency of the departure phase operations on the surface of an aerodrome. This may include the average queuing that is taking place in front of the departure runways, non-optimal taxi routing and intermediate aircraft stops during taxi-out. The KPI is also typically used to estimate excess taxi-out fuel consumption and associated emissions (for the Environment KPA). The KPI is designed to filter out the effect of physical airport layout while focusing on the responsibility of ATM to optimize the outbound traffic flow from gate to take-off.
Parameters	Unimpeded/reference taxi-out time:
	 Recommended approach for the basic variant of the KPI: a single value at airport level, e.g. the 20th percentile of actual taxi times recorded at an airport, sorted from the shortest to the longest. Recommended approach for the advanced variant of the KPI: a separate value for each gate/runway combination, e.g. the average actual taxi-out time recorded during periods of noncongestion (needs to be periodically reassessed).
Data Requirement	For each departing flight:
	Actual off-block time (AOBT)Actual take-off time (ATOT)
	In addition, for the advanced KPI variant:
	 Departure gate ID Take-off runway ID
Data Feed Providers	Airports (airport operations, A-CDM), airlines (OOOl data), ADS-B data providers and/or ANSPs

Formula / A	Algorithm	At the level of individual flights:
		Select departing flights, exclude helicopters
		2. Compute actual taxi-out duration: ATOT minus AOBT
		3. Compute additional taxi-out time: actual taxi-out duration minus unimpeded taxi-out time
		At aggregated level:
		4. Compute the KPI: sum of additional taxi-out times divided by number of IFR departures
References	s &	Comparison of ATM-Related Operational Performance: U.S./Europe (September 2016)
Examples of	of Use	Singapore / US / Europe benchmarking study (CAAS - FAA - EUROCONTROL, 2017)
		 China / Europe benchmarking study (CAUC - EUROCONTROL, 2017) PRC Performance Review Report (EUROCONTROL 2017)
		European ANS Performance Data Portal
		Single European Sky Performance Scheme
		CANSO Recommended KPIs for Measuring ANSP Operational Performance (2015)

KP103	ATFM slot adherence
Definition	Percentage of flights taking off within their assigned ATFM slot (Calculated Take-Off Time Compliance).
Mesurement Units	% of flights subject to flow restrictions
Operations Measure	ed The take-off of IFR flights subject to flow restrictions.
Variants	Variants are possible depending on the size of the ATFM slot window.
Objects Characterize	edThe KPI is typically computed for individual airports, or clusters of airports (selection/grouping based on size and/or geography).
Utility of the KPI	This KPI gives an indication of the capability of an airport to contribute to ATFM effectiveness by delivering outbound traffic in a predictable manner to the departure runway, in compliance with assigned ATFM slots.
Parameters	Size of the ATFM slot window.
	Variant 1: the period between 5 minutes before and 10 minutes after the CTOT.
	Variant 2: the period between 5 minutes before and 5 minutes after the CTOT.
Data Requirement	 For each departing IFR flight subject to an ATFM regulation: Calculated Take-Off Time (CTOT) Actual take-off time (ATOT)
Data Feed Providers	s Airports, ATFM service

Formula / Algorithm	At the level of individual flights:
	Exclude flights not subject to an ATFM regulation
	2. Categorize each departing flight as compliant with its ATFM slot window or not
	At aggregated level:
	3. Compute the KPI: number of compliant departures divided by total number of departing flights subject to an ATFM regulation
References & Examples of Use	 PRC Performance Review Report (EUROCONTROL 2017) European ANS Performance Data Portal Slot Tolerance Window (STW) compliance (Single European Sky Performance Scheme) EDCT Window compliance (US) CANSO Recommended KPIs for Measuring ANSP Operational Performance (2015)

KP104	Filed flight plan en-route extension
Definition	Flight planned en-route distance compared to a reference ideal trajectory distance.
Mesurement Units	% excess distance
Operations Measure	d The planned en-route distance, as selected during the preparation of flight plans.
Variants	Variant 1, using a 40 NM cylinder around the departure and destination airport as the start/end of enroute airspace.
	Variant 2, using a 40 NM cylinder around the departure airport and a 100 NM cylinder around the destination airport as the start/end of en-route airspace.
Objects Characterize	at State level (covering the FIRs of a State).
Utility of the KPI	This KPI measures the en-route horizontal flight (in)efficiency contained in a set of filed flight plans crossing an airspace volume. Its value is influenced by route network design, route & airspace availability, airspace user choice (e.g. to ensure safety, to minimize cost and to take into account wind and weather) and airspace user constraints (e.g. overflight permits, aircraft limitations). A significant gap between this KPI and the Actual en-Route Extension KPI indicates that many flights are not flown along the planned route, which should trigger an analysis of why this is happening.
Parameters	A 'Measured area' is defined for which the KPI is computed. For example, a State.
	A 'Reference area' is defined as a (sub)regional boundary considered, containing all 'Measured areas', for example States within the same ICAO Region.
	Departure terminal area proxy: a cylinder with 40 NM radius around the departure airport.
	Destination terminal area proxy: a cylinder with 40 NM radius around the destination airport (variant 1). For variant 2 the radius is 100 NM.

Data Requirement

For each flight plan:

- Departure airport (Point A)
- Destination airport (Point B)
- Entry point in the 'Reference area' (Point O)
- Exit point from the 'Reference area' (Point D)
- Entry points in the 'Measured areas' (Points N)
- Exit points from the 'Measured areas' (Points X)
- Planned distance for each NX portion of the flight

Data Feed Providers ANSPs

Formula / Algorithm For the horizontal trajectory of each flight, different parts (trajectory portions) are considered (see Figure 1 for the example of a flight departing outside the 'Reference Area' and overflying a measured State; Figure 2 for the example of a domestic flight within a measured State):

- 1. The part of the flight which is within the reference area (segment OD). If airports A and/or B are located within the reference area, the points O and/or D are placed on the airport reference point (ARP).
- 2. The part of the flight for which the State level indicator is computed (between points N and X). If points A and/or B (the airports) are located within the measured State, the points N and/or X are placed on the 40 NM circle (variant 1) around the airport reference point as shown in Figure 2, to exclude terminal route efficiency from the indicator.

Between points N and X, three quantities can be computed: the planned distance (length of flight plan trajectory), the local direct distance (great circle distance between N and X, not required for this indicator), and the contribution of the trajectory between N and X to the completion of the great circle distance between O and D. This contribution is called the "achieved distance". The formula for computing this is based on four great circle distances interconnecting the points O, N, X and D: achieved distance = [(OX-ON)+(DN-DX)]/2.


When a given flight traverses multiple States, the sum of the planned distance in each State equals the total planned distance from O to D. Likewise the sum of all achieved distances equals the direct distance from O to D.

The extra distance for a portion NX of a given flight is the difference between the actual/flight planned distance and the achieved distance. The total extra distance observed within a measured area (e.g. a State) over a given time period is the sum of the planned distances across all traversing flights, minus the sum of the achieved distances across all traversing flights.

The KPI is computed as the total extra distance divided by total achieved distance, expressed as a percentage.

References & Examples of Use

- ICAO EUR Doc 030 EUR Region Performance Framework Document (July 2013)
- Comparison of ATM-Related Operational Performance: U.S./Europe (September 2016)
- PRC Performance Review Report (EUROCONTROL 2017)
- European ANS Performance Data Portal
- Single European Sky Performance Scheme
- CANSO Recommended KPIs for Measuring ANSP Operational Performance (2015)

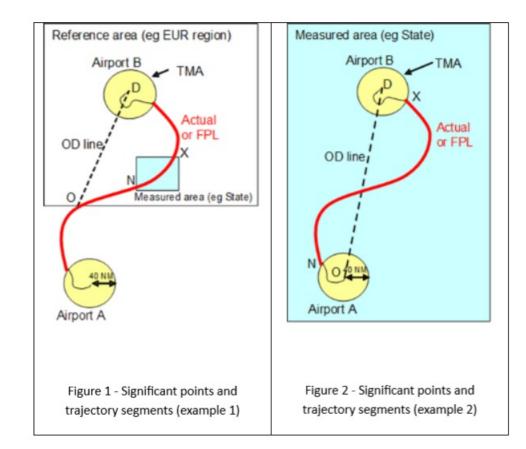

Significant points and trajectory segments (examples 1 and 2)

KP105	Actual en-route extension	
Definition	Actual en-route distance flown compared to a reference ideal distance.	
Mesurement Units	% excess distance	
Operations Measure	ed The actual distance flown by flights in en-route airspace.	
Variants	Variant 1, using a 40 NM cylinder around the departure and destination airport as the start/end of enroute airspace.	
	Variant 2, using a 40 NM cylinder around the departure airport and a 100 NM cylinder around the destination airport as the start/end of en-route airspace.	
Objects CharacterizedThe KPI can be computed for a traffic flow or a volume of en-route airspace; this implies that it can be computed at State level (covering the FIRs of a State).		
Utility of the KPI	This KPI measures the en-route horizontal flight (in)efficiency as actually flown, of a set of IFR flights crossing an airspace volume. Its value is influenced by route network design, route & airspace availability, airspace user choice (e.g. to ensure safety, to minimize cost and to take into account wind and weather) and airspace user constraints (e.g. overflight permits, aircraft limitations), and tactical ATC interventions modifying the trajectory (e.g. reroutings and 'direct to' clearances). The KPI is also typically used to estimate the excess fuel consumption and associated emissions (for the Environment KPA) attributed to horizontal flight inefficiency.	

Identical to the parameters of the 'Filed Flight Plan en-Route Extension' KPI. **Parameters** For each actual flight trajectory: Data Requirement Departure airport (Point A) • Destination airport (Point B) • Entry point in the 'Reference Area' (Point O) • Exit point from the 'Reference Area' (Point D) • Entry points in the 'Measured Areas' (Points N) • Exit points from the 'Measured Areas' (Point X) · Distance flown for each NX portion of the actual flight trajectory, derived from surveillance data (radar, ADS-B...). Data Feed Providers ANSPs, ADS-B data providers Formula / Algorithm Identical to the formula/algorithm of the 'Filed Flight Plan en-Route Extension' KPI. • ICAO EUR Doc 030 EUR Region Performance Framework Document (July 2013) References & • Comparison of ATM-Related Operational Performance: U.S./Europe (September 2016) Examples of Use • PRC Performance Review Report (EUROCONTROL 2017)

European ANS Performance Data PortalSingle European Sky Performance Scheme

capacity).

KP106	En-route airspace capacity
Definition	The maximum volume of traffic an airspace volume will safely accept under normal conditions in a given time period.
Mesurement Units	Variant 1: Movements/hr Variant 2: Number of aircraft (occupancy count)
Operations Measure	The nominal capability of an ANSP to deliver ATM services to IFR traffic in a given volume of enroute airspace, as seen at a given planning horizon. For each horizon a different type of capacity is to be considered: • Planned capacity: expected values one or more years ahead for planning and investment purposes • Declared capacity: values used during the strategic and pre-tactical ATFM processes • Expected capacity: values as finalised at the end of the pre-tactical process • Actual capacity: values as actually used on the day of operation during tactical ATFM and ATC.
Variants	Variant 1: airspace throughput (entry flow rate)
	Variant 2: airspace occupancy count
Objects CharacterizedThe KPI is typically used at the level of individual sectors (sector capacity) or en-route facilities (ACC	

• CANSO Recommended KPIs for Measuring ANSP Operational Performance (2015)

Utility of the KPI	The KPI measures an upper bound on the allowable throughput or occupancy count of an en-route facility or sector.
	Planned capacities are primarily used for multi-year and investment planning. Declared, expected and actual capacities are used in traffic flow management as well as for measuring and monitoring service delivery and efficiency. Some ANSPs may prefer not to declare capacities, and only have these capacities established on a daily basis based on known/current operational factors. Establishing capacities at different planning horizons provides an important reference for understanding the total system performance under normal operating conditions and provides a basis to work from when determining the impact of operational factors limiting capacity. These factors include – but are not limited to – ATCO availability and workload.
Parameters	Variant 1: time interval at which the throughput declaration is made. Variant 2: time interval at which the average occupancy count declaration is made.
Data Requirement	The various capacities are determined by the ANSP, and are dependent on traffic pattern, sector configuration, ATCO and system capability, etc.

Data Feed Providers ANSPs

Formula / Algorithm At the level of an individual en-route facility:

- 1. Select highest value from the set of established capacities (the maximum configuration capacity).
- 2. Compute the KPI: for variant 1, convert the value to an hourly movement rate, if the declaration is at smaller time intervals.

References &

- Brazil / Europe benchmarking study (DECEA EUROCONTROL, 2017)
- CANSO Recommended KPIs for Measuring ANSP Operational Performance (2015)

KP107	En-route ATFM delay
Definition	ATFM delay attributed to flow restrictions in a given en-route airspace volume
Mesurement Units	Minutes/flight
Operations Measure	d The management of (temporary) capacity shortfalls in en-route airspace due to high demand and/or capacity reductions for a variety of reasons, resulting in the allocation of ATFM delay
Variants	None
Objects Characterize	edThe KPI can be computed for any volume of en-route airspace which participates in the ATFM process.

Utility of the KPI	This KPI is a time aggregation of the ATFM delay generated by flow restrictions which are established to protect a given volume of en-route airspace against demand/capacity imbalances. These flow restrictions (also called ATFM regulations) normally have a delay cause associated with them. This allows the KPI to be disaggregated by cause, which allows better diagnosis of the reasons for demand/capacity imbalances. Typically, the KPI is used to check whether ANSPs provide the capacity needed to cope with demand.
Parameters	None
Data Requirement	For each IFR flight: - Estimated Take-off Time (ETOT) computed from the last filed flight plan - Calculated Take-off Time (CTOT) - ID of the flow restriction generating the ATFM delay - Airspace volume associated with the flow restriction - Delay code associated with the flow restriction
Data Feed Providers	ATFM
Formula / Algorithm	At the level of individual flights:
	1. Select the flights crossing the volume of en-route airspace
	2. Select the subset of flights which are affected by the flow restrictions in this airspace
	3. Compute ATFM delay: CTOT minus ETOT
	At aggregated level:
	4. Compute the KPI: sum of ATFM delays divided by number of IFR flights crossing the airspace
References & Examples of Use	 ICAO EUR Doc 030 EUR Region Performance Framework Document (July 2013) Comparison of ATM-Related Operational Performance: U.S./Europe (September 2016) PRC Performance Review Report (EUROCONTROL 2017) European ANS Performance Data Portal Single European Sky Performance Scheme CANSO Recommended KPIs for Measuring ANSP Operational Performance (2015)

KP108	Additional time in terminal airspace
Definition	Actual terminal airspace transit time compared to an unimpeded time. Actual trajectories are generally longer in time and distance due to path stretching and/or holding patterns. In the example below the unimpeded trajectories are shown in red, and the actual trajectories in green and blue. See Figure 1: Terminal trajectories.
Mesurement Units	Minutes/flight
Operations Measure	ed The terminal airspace transit time during the arrival flight phase.

Variants

Variants are possible depending on the chosen size of terminal airspace (40 NM or 100 NM cylinder) and the richness of the data feed: basic (without arrival runway ID) or advanced (with arrival runway ID)

Variants with 100 NM cylinder are useful if airports have holding patterns outside the 40 NM cylinder.

The use of generic cylinders abstracts local specifics in terms of approach airspace design (e.g. TMA) and ensures comparability across different airports.

See table 1: Cylinder variants

Objects CharacterizedThe KPI is typically computed for individual airports, or clusters of airports (selection/grouping based on size and/or geography).

Utility of the KPI

This KPI is intended to give an indication of the average queuing that is taking place in terminal airspace. This queuing is the result of sequencing and metering. The KPI captures the extent to which arriving flights are subjected to speed reductions, path extensions and holding patterns to absorb the queuing time. The KPI is also typically used to estimate excess fuel consumption and associated emissions (for the Environment KPA) attributable to horizontal flight inefficiency in terminal airspace. The KPI is designed to filter out the operational variability of terminal airspace transit time (e.g. due to wind, aircraft speed and length of the approach procedure, such as the difference between a straight-in approach and a downwind arrival) while focusing on the responsibility of ATM to optimize the inbound traffic flow from terminal airspace entry to landing.

Parameters

Destination terminal area proxy (also called Arrival Sequencing and Metering Area – ASMA): a cylinder with 40 NM radius around the destination airport. For variants A100 and B100 the radius is 100 NM.

For the advanced variants only: list of terminal airspace entry segments (used to group flights entering the cylinder from ± the same direction).

Unimpeded terminal airspace transit time:

- Recommended approach for the basic variants of the KPI: a single value at airport level = the 20th
 percentile of actual terminal airspace transit times recorded at an airport, sorted from the shortest
 to the longest.
- Recommended approach for the advanced variants of the KPI: a separate value for each entry segment/landing runway combination = the average terminal airspace transit time recorded during periods of non-congestion (needs to be periodically reassessed).

Data Requirement

For each arriving flight:

- Terminal airspace entry time, computed from surveillance data (radar, ADS-B...)
- Actual landing time (ALDT)

In addition, for the advanced KPI variants:

- Terminal airspace entry segment, computed from surveillance data (radar, ADS-B...)
- Landing runway ID

Data Feed Providers Airlines (OOOI data), airports, ADS-B data providers and/or ANSPs

Formula / Algorithm At the level of individual flights:

- 1. Select arrivals, exclude helicopters
- 2. Compute actual terminal airspace transit time: ALDT minus terminal airspace entry time
- 3. Compute additional terminal airspace transit time: actual terminal airspace transit time minus unimpeded terminal airspace transit time

At aggregated level:

4. Compute the KPI: sum of additional terminal airspace transit times divided by number of IFR arrivals

References & Examples of Use

- Comparison of ATM-Related Operational Performance: U.S./Europe (September 2016)
- Singapore / US / Europe benchmarking study (CAAS FAA EUROCONTROL, 2017)
- PRC Performance Review Report (EUROCONTROL 2017)
- European ANS Performance Data Portal
- Single European Sky Performance Scheme
- CANSO Recommended KPIs for Measuring ANSP Operational Performance (2015)

	40 NM cylinder	100 NM cylinder
Advanced data feed	Variant A40	Variant A100
Basic data feed	Variant B40	Variant B100

Table 1: Cylinder variants

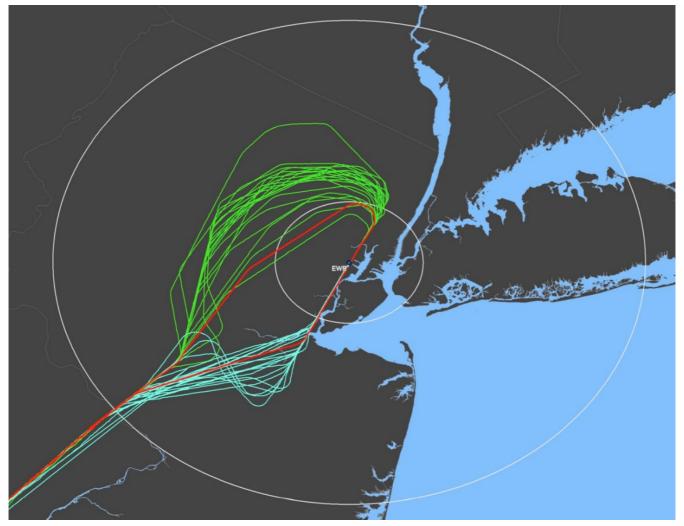


Figure 1: Terminal trajectories

KP109	Airport peak capacity
Definition	The highest number of operations an airport can accept in a one-hour time frame (also called declared capacity). Can be computed for arrivals, departures or arrivals+departures.
Mesurement Units	Number of departures / hour, Number of landings / hour, Number of (departures+landings) / hour
Operations Measure	ed The capacity declaration of an airport.
Variants	Variant A: Airport peak arrival capacity
	Variant D: Airport peak departure capacity
	Variant AD: Airport peak movement capacity (departures + arrivals)

Objects CharacterizedThe KPI is computed for individual airports.

Utility of the KPI	This KPI indicates the highest number of operations that an airport will accept, using the most favorable runway configuration under optimum operational conditions. The runways may or may not be the most constraining factor for airport capacity: at some airports the most constraining factor may be the terminal airspace, the taxiways, the number of gates, passenger handling capacity etc. The KPI is typically used for scheduling and ATFM purposes, and to develop capacity investment plans.
Parameters	None
Data Requirement	Scheduling parameters for slot controlled airports
	Airport Acceptance Rates (AAR), Airport Departure Rates (ADR)
Data Feed Providers	s Airports
Formula / Algorithm	At the level of an individual airport:
	1. Select highest value from the set of declared capacities.
	2. Compute the KPI: convert the value to an hourly rate, if the declaration is at smaller time intervals.
References & Examples of Use	 Comparison of ATM-Related Operational Performance: U.S./Europe (September 2016) Brazil / Europe benchmarking study (DECEA - EUROCONTROL, 2017) CANSO Recommended KPIs for Measuring ANSP Operational Performance (2015)

KPI10	Airport peak throughput
Definition	The 95th percentile of the hourly number of operations recorded at an airport, in the "rolling" hours sorted from the least busy to the busiest hour. Can be computed for arrivals, departures or arrivals+departures.
Mesurement Units	Number of departures / hour, Number of landings / hour, Number of (departures+landings) / hour
Operations Measure	ed The actual number of operations at an airport.
Variants	Variant 1: IFR operations only
	Variant 2: IFR + VFR operations (relevant for airports with a high percentage of VFR traffic)
	To be combined with:
	Variant A: Airport peak arrival throughput
	Variant D: Airport peak departure throughput
	Variant AD: Airport peak movement throughput (departures + arrivals)
Objects Characteriz	edThe KPI is computed for individual airports.
Utility of the KPI	This KPI gives an indication of "busy-hour" actual movement rates at an airport, as recorded during a given time period. For congested airports, this throughput is an indication of the effectively realized capacity; for uncongested airports it is a measure of demand.

Parameters	Time interval for "rolling" hours. Recommended value: 15 minutes.
	The percentile chosen to exclude outliers. Recommended value: 95th percentile.
Data Requirement	For each flight:
	 Actual landing time (ALDT) Actual take-off time (ATOT).
Data Feed Providers	s Airports
Formula / Algorithm	At the level of individual flights:
	1. Select flights, exclude helicopters
	At the level of individual "rolling" hours:
	2. Convert the set of flights to hourly landing rates and departure rates by "rolling" hour
	3. Sort the "rolling" hours from the least busy to the busiest hour
	4. Compute the KPI: it equals the rate value of the 95th percentile of the "rolling" hours
References & Examples of Use	 Comparison of ATM-Related Operational Performance: U.S./Europe (September 2016) Singapore / US / Europe benchmarking study (CAAS - FAA - EUROCONTROL, 2017) China / Europe benchmarking study (CAUC - EUROCONTROL, 2017) Brazil / Europe benchmarking study (DECEA - EUROCONTROL, 2017)

KPI11	Airport throughput efficiency
Definition	Airport throughput (accommodated demand) compared to capacity or demand, whichever is lower. Can be computed for arrivals, departures or arrivals+departures.
Mesurement Units	Average Over/Under Delivery or % of accommodated operations.
Operations Measure	d The number of unaccommodated operations at an airport.
Variants	Variant A: IFR arrivals
	Variant D: IFR departures
	Variant AD: IFR Operations (arrivals + departures)
Objects Characterize	edThe KPI is computed for individual airports.
Utility of the KPI	This KPI assesses how effectively capacity is managed by the ANSP. It is a measure of accommodated demand, compared to the available capacity of the airport, irrespective of the delay incurred by arriving traffic. Seen in another way, it captures the "missed" slots. At congested airports, the KPI relates the throughput to the declared capacity. At uncongested airports (or airports without declared capacity) the KPI relates the throughput to the unconstrained demand based on flight plans.
Parameters	Time interval at which to perform the most granular calculations. Recommended value: 15 minutes.

Data Requirement

For each arriving and/or departing flight:

- Actual landing time (ALDT) and take-off time (ATOT)
- Estimated landing time (ELDT) and take-off time (ETOT) (from flight plan)

For each time interval:

- Declared landing capacity of the airport
- Declared departure capacity of the airport
- Declared total capacity of the airport

Data Feed Providers Airports

Formula / Algorithm Example for arrivals:

For each time interval:

- 1. Compute the throughput: count the number of actual landings based on ALDT
- 2. Compute the demand: count the number of estimated landings based on ELDT
- 3a. if demand >= capacity: efficiency = throughput / capacity
- 3b. if demand < capacity: efficiency = throughput / demand

At aggregated level (longer time periods):

4. Compute the KPI: sum(efficiency*demand) / sum(demand)

Note: See Table 1: Example for arrivals. The average percentage weighted by actual arrivals is 96.1%. The average under-delivery of arrivals is -1.8. The same process can be used for departures or combined operations.

References & Examples of Use

- Singapore / US / Europe benchmarking study (CAAS FAA EUROCONTROL, 2017)
- Brazil / Europe benchmarking study (DECEA EUROCONTROL, 2017)
- CANSO Recommended KPIs for Measuring ANSP Operational Performance (2015)

Hour	15	16	17	18	19	20	21	22	23
				Data					
Demand	41	58	59	70	67	59	63	72	66
Capacity	35	35	35	35	35	35	40	45	45
Throughput	30	38	36	36	36	32	35	37	44
			Pe	rformance	e Score				
Throughput / Min (Demand, Capacity)	85.7%	108%	103%	103%	103%	91.4%	87.5%	82.2%	97.8%
Throughput minus Min (Demand, Capacity)	-5	3	1	1	1	-3	-5	-8	-1

Table 1: Example for arrivals

KPI12	Airport/Terminal ATFM delay
Definition	ATFM delay attributed to arrival flow restrictions at a given airport and/or associated terminal airspace volume.
Mesurement Units	Minutes/flight
Operations Measure	d The management of (temporary) capacity shortfalls at and around destination airports due to high demand and/or capacity reductions for a variety of reasons, resulting in the allocation of ATFM delay.
Variants	None
Objects Characterize	edThe KPI is typically computed for individual airports, or clusters of airports (selection/grouping based on size and/or geography).
Utility of the KPI	This KPI is a time aggregation of the ATFM delay generated by flow restrictions which are established to protect a destination airport or its terminal area against demand/capacity imbalances. If a terminal area covers multiple airports, each individual flight delay is attributed to the corresponding destination airport. These flow restrictions (also called ATFM regulations) normally have a delay cause associated with them. This allows the KPI to be disaggregated by cause, which allows better diagnosis of the reasons for demand/capacity imbalances. Typically, the KPI is used as a proxy to check whether airports and ANSPs provide the capacity needed to cope with demand.
Parameters	None

Data Requirement	For each IFR Ilight.	

- Estimated Take-off Time (ETOT) computed from the last filed flight plan
- Calculated Take-off Time (CTOT)
- ID of the flow restriction generating the ATFM delay
- Airport or terminal airspace volume associated with the flow restriction
- Delay code associated with the flow restriction

Data Feed Providers ATFM

Formula / Algorithm At the level of individual flights:

- 1. Select the flights arriving at this airport
- 2. Select the subset of flights which are affected by the flow restrictions at this airport or its terminal airspace
- 3. Compute ATFM delay: CTOT minus ETOT

At aggregated level:

4. Compute the KPI: sum of ATFM delays divided by number of arrivals at the airport

References & Examples of Use

- ICAO EUR Doc 030 EUR Region Performance Framework Document (July 2013)
- PRC Performance Review Report (EUROCONTROL 2017)
- European ANS Performance Data Portal
- Single European Sky Performance Scheme
- CANSO Recommended KPIs for Measuring ANSP Operational Performance (2015)

KPI13	Taxi-in additional time
Definition	Actual taxi-in time compared to an unimpeded/reference taxi-in time
Mesurement Units	Minutes/flight
Operations Measure	d The duration of the taxi-in phase of arriving flights
Variants	Variant 1 – basic (computed without landing runway and arrival gate data)
	Variant 2 – advanced (computed with landing runway and arrival gate data)
Objects Characterize	edThe KPI is typically computed for individual airports, or clusters of airports (selection/grouping based on size and/or geography).
Utility of the KPI	This KPI is intended to give an indication of the various taxi-in inefficiencies that occur after landing. Its value may be influenced by unavailability of the arrival gate and effects such as non-optimal taxi routing and intermediate aircraft stops during taxi-in. The KPI is also typically used to estimate excess taxi-in fuel consumption and associated emissions (for the Environment KPA). The KPI is designed to filter out the effect of physical airport layout while focusing on the responsibility of the airport to provide parking space and ATM to optimize the inbound traffic flow from landing to inblocks.

Parameters	Unimpeded/reference taxi-in time:
	 Recommended approach for the basic variant of the KPI: a single value at airport level, e.g. the 20th percentile of actual taxi times recorded at an airport, sorted from the shortest to the longest Recommended approach for the advanced variant of the KPI: a separate value for each runway/gate combination, e.g. the average actual taxi-in time recorded during periods of noncongestion (needs to be periodically reassessed)
Data Requirement	For each arriving flight:
	Actual landing time (ALDT)Actual in-block time (AIBT)
	In addition, for the advanced KPI variant:
	Landing runway IDArrival gate ID
Data Feed Providers	s Airports (airport operations), airlines (OOOl data), ADS-B data providers and/or ANSPs
Formula / Algorithm	At the level of individual flights:
	Select arriving flights, exclude helicopters
	2. Compute actual taxi-in duration: AIBT minus ALDT
	3. Compute additional taxi-in time: actual taxi-in duration minus unimpeded taxi-in time
	At aggregated level:
	4. Compute the KPI: sum of additional taxi-in times divided by number of IFR arrivals
References & Examples of Use	 Comparison of ATM-Related Operational Performance: U.S./Europe (September 2016) China / Europe benchmarking study (CAUC - EUROCONTROL, 2017) PRC Performance Review Report (EUROCONTROL 2017)

KPI14	Arrival punctuality
Definition	Percentage of flights arriving at the gate on-time (compared to schedule)
Mesurement Units	% of scheduled flights
Operations Measure	ed IFR arrivals of scheduled airlines
Variants	Variant 1A $-\%$ of arrivals within \pm 5 minutes of scheduled time of arrival
	Variant 1B – % of arrivals delayed ≤ 5 minutes versus schedule
	Variant 2A – % of arrivals within ± 15 minutes of scheduled time of arrival
	Variant 2B – % of arrivals delayed ≤ 15 minutes versus schedule

• CANSO Recommended KPIs for Measuring ANSP Operational Performance (2015)

Objects Characterize	dThe KPI is typically computed for traffic flows, individual airports, or clusters of airports (selection/grouping based on size and/or geography).
Utility of the KPI	This is an airspace user and passenger focused KPI: arrival punctuality gives an overall indication of the service quality experienced by passengers, and the ability of the airlines to execute their schedule at a given destination.
Parameters	On-time threshold (maximum positive or negative deviation from scheduled arrival time) which defines whether a flight is counted as on-time or not.
	Recommended values: 5 minutes and 15 minutes.
Data Requirement	For each arriving scheduled flight:
	 Scheduled time of arrival (STA) or Scheduled in-block time (SIBT) Actual in-block time (AIBT)
Data Feed Providers	Schedule database(s), airports, airlines and/or ANSPs
Formula / Algorithm	At the level of individual flights:
	Exclude non-scheduled arrivals
	2. Categorize each scheduled arrival as on-time or not
	At aggregated level:
	3. Compute the KPI: number of on-time arrivals divided by total number of scheduled arrivals
References & Examples of Use	 Comparison of ATM-Related Operational Performance: U.S./Europe (September 2016) China / Europe benchmarking study (CAUC - EUROCONTROL, 2017) PRC Performance Review Report (EUROCONTROL 2017)

KPl15	Flight time variability
Definition	Distribution of the flight (phase) duration around the average value.
Mesurement Units	Minutes/flight
Operations Measure	d Scheduled flights with the same flight ID on a given airport-pair (flight XYZ123 from A to B): the gate-to-gate duration, and at more detailed level the duration of the individual flight phases (taxi-out, airborne, taxi-in)
Variants	Different parameter values possible (see 'Parameters').
Objects Characterize	edThe KPI is typically computed for the scheduled traffic flows interconnecting a given cluster of airports (two or more; selection/grouping based on size and/or geography).

Utility of the KPI	The "variability" of operations determines the level of predictability for airspace users and hence has an impact on airline scheduling. It focuses on the variance (distribution widths) associated with the individual phases of flight as experienced by airspace users.
	The higher the variability, the wider the distribution of actual travel times and the more costly time buffer is required in airline schedules to maintain a satisfactory level of punctuality. In addition, reducing the variability of actual block times can potentially reduce the amount of excess fuel that needs to be carried for each flight in order to allow for uncertainties.
Parameters	Minimum monthly flight frequency filter: flights with a frequency less than 20 times per month are not included in the indicator.
	Outlier filter:
	Variant 1: Only 70% of the (remaining) flights are considered in the indicator, i.e. the 15th percentile (percentile 1) is used to determine the shortest duration, the 85th percentile (percentile 2) is used to determine the longest duration
	Variant 2: Only 60% of the (remaining) flights are considered in the indicator, i.e. the 20th percentile (percentile 1) is used to determine the shortest duration, the 80th percentile (percentile 2) is used to determine the longest duration
Data Requirement	For each flight:
	OOOI data: gate "out" (AOBT), wheels "off," wheels "on," and gate "in" (AIBT) actual times.
Data Feed Providers	s Airlines
Formula / Algorithm	At the level of flights with the same flight ID, at monthly or longer (e.g. annual) time aggregation level:
	1. Exclude flight IDs not meeting the minimum monthly frequency requirement
	2. Sort flights in ascending order of flight (phase) duration
	3. Identify shortest (percentile 1) and longest (percentile 2) duration
	4. Compute variability: (longest – shortest) / 2
	At the more aggregated level:
	5. Compute the KPI: weighted average of the individual flight ID variabilities
References & Examples of Use	 Comparison of ATM-Related Operational Performance: U.S./Europe (September 2016) PRC Performance Review Report (EUROCONTROL 2017) CANSO Recommended KPIs for Measuring ANSP Operational Performance (2015)

KPI16	Additional fuel burn
Definition	Additional flight time/distance and vertical flight inefficiency converted to estimated additional fuel burn attributable to ATM
Mesurement Units	kg fuel/flight

Operations Measured Actual IFR flights

Variants

Variant 1 – simple approach: calculation based on the average value other KPIs for groups of flights and corresponding average fuel burn values

Variant 2 – advanced approach: calculation based on values computed for individual flights

Objects CharacterizedThis KPI is a conversion of the additional flight time/distance and vertical flight inefficiency KPIs to a corresponding (estimated) additional fuel consumption; hence it describes a performance characteristic of the same objects as the additional flight time/distance and vertical flight inefficiency KPIs: en-route airspace, terminal airspace and airports. Typically the KPI is published at the level of a State or (sub)region.

Utility of the KPI

This KPI is designed to provide a simple method for estimating ATM-related fuel efficiency at aggregated level, without the need to model fuel burn at the level of individual flights. By adding the average additional fuel burn value of the individual flight phases, a gate-to-gate value is produced which is representative for an "average flight".

The KPI is often further converted into additional CO2 emission (for the environment KPA) and/or the monetary value of fuel savings (for the cost effectiveness KPA).

The KPI is sometimes called the "benefit pool": it gives an indication of the ATM-induced flight inefficiency that is theoretically actionable by ATM.

In practice the actionable "benefit pool" is smaller: real optimum performance is achieved at a residual non-zero value of the KPI.

Parameters

Average fuel flow (kg/min) during taxi

Average fuel flow (kg/min) during arrival in terminal airspace

Average fuel flow (kg/km) in en-route airspace

Average additional fuel flow (kg/FL/km) during cruise due to flying lower

Data Requirement

Indicator values to be converted to estimated additional fuel burn:

KPI02 Taxi-Out Additional Time (min/flight)

KPI13 Taxi-In Additional Time (min/flight)

KPI05 Actual en-Route Extension (%) & average en-route distance flown (km/flight)

KPI08 Additional time in terminal airspace (min/flight)

KPI17 Level-off during climb

KPI18 Level capping during cruise & average cruise (ToC-ToD) distance flown (km/flight)

KPI19 Level-off during descent

Data Feed Providers Performance analysts

Formula	/ Algorithm	At aggregated I	evel:

Compute the KPI: (KPI02 Taxi-Out Additional Time x Average fuel flow during taxi) + (KPI13 Taxi-In Additional Time x Average fuel flow during taxi) + (KPI05 Actual en-Route Extension (%) x Average en-route distance flown x Average fuel flow in en-route airspace) + (KPI08 Additional time in terminal airspace x Average fuel flow during arrival in terminal airspace) + (KPI17 Level-off distance during climb x Average additional fuel flow during climb) + (KPI18 Average number of FL too low x Average distance during cruise x Average additional fuel flow per FL too low during cruise) + (KPI19 Level-off distance during descent x Average additional fuel flow during descent).

References & Examples of Use

• Comparison of ATM-Related Operational Performance: U.S./Europe (September 2016)

KPI17	Level-off during climb
Definition	Distance and time flown in level flight before Top of Climb.
Mesurement Units	NM/flight and minutes/flight
Operations Measure	ed Actual IFR flights
Variants	Variant 1: Average distance flown in level flight before Top of Climb
	Variant 2: Average time flown in level flight before Top of Climb
Objects Characteriz	edThe KPI is typically computed for traffic flows, individual airports, or clusters of airports (selection/grouping based on size and/or geography).
Utility of the KPI	This KPI is intended to give an indication of the amount of level flight during the climb phase. Ideally, there should be no level flight during climbs because level flight results in a higher fuel burn and possibly more noise. Aircraft should reach their cruising altitudes as soon as possible since the fuel consumption is lower at higher altitudes.
Parameters	 Analysis radius: the radius around the analysed airport within which the climb trajectory is analysed (e.g. 200NM). Vertical speed limit: maximum vertical speed used to detect the start and end of a level segment (e.g. 300 feet/minute). Level band limit: altitude band within which data points have to stay to be included in a level segment (e.g. 200 feet). Minimum level time: minimum time duration for a level segment to be considered in the results (e.g. 20 seconds). Exclusion box percentage: percentage of the Top of Climb altitude which is used to define the lower altitude of the exclusion box (e.g. 90%). E.g. level segments occurring above the lower altitude limit of the exclusion box and longer than the exclusion box time are excluded from the results. Exclusion box time: a level segment in the exclusion box and longer than the exclusion box time is excluded (e.g. 5 minutes). Minimum altitude: the altitude where the level segment detection during the climb starts. The trajectory below this altitude is not analysed (e.g. 3000 feet).

Data Requirement	For each flight trajectory:
	4D data points (latitude, longitude, altitude and time)
	Departure airport ARP coordinates
Data Feed Providers	Trajectory data providers (reporting archived actual trajectories based on ADS-B and/or other surveillance data sources) and/or ANSPs.
Communic / Algorithms	Level comments in the climb trajectory within the analysis radius are detected using the vertical
Formula / Algorithm	Level segments in the climb trajectory within the analysis radius are detected using the vertical speed limit and level band limit. The methodology considers a data point as the start of a level
	segment when the following conditions are met:
	segment when the following conditions are met.
	• the altitude difference with the next data point is less than or equal to the level band limit; and
	• the vertical speed towards the next data point is less than or equal to the vertical speed limit.
	The level segment ends when the altitude difference between the altitude of the beginning of the level
	segment and the altitude of a data point is more than the level band limit or when the vertical speed
	between two consecutive data points is more than the vertical speed limit.
References &	Comparison of ATM-Related Operational Performance: U.S./Europe (September 2016)
Examples of Use	PRC Performance Review Report (EUROCONTROL 2017)
-	

• European ANS Performance Data Portal

KPI18	Level capping during cruise
Definition	Flight Level difference between maximum Flight Levels on a measured airport pair and maximum Flight Levels on similar unconstrained airport pairs.
Mesurement Units	Flight Levels/flight
Operations Measure	ed The cruise phase of IFR flights.
Variants	Variant 1: based on the maximum cruise Flight Level in the last filed flight plans
	Variant 2: based on the maximum cruise Flight Level of actual trajectories (surveillance data)
Objects Characterize	edThe KPI is typically computed for traffic flows on individual airport pairs or groups of airport pairs (weighted average).
Utility of the KPI	This KPI is intended to give an indication of the amount of vertical flight inefficiency related to maximum Flight Levels during the cruise phase (level capping). It measures the average Flight Level difference between the maximum Flight Levels of respectively flights on the analysed airport pair and flights on similar unconstrained airport pairs.
	The KPI is purely based on statistical processing of vertical flight profiles; it does not require any data on operational level capping constraints.

Parameters

- Great Circle Distance (GCD) interval: the width of the ranges of great circle distances (e.g. 10NM). If 10 NM is used, reference distributions are built for airport pairs with a great circle distance in the following ranges: [ONM, 10NM), [10NM, 20NM), [20NM, 30NM)...
- Number of reference flights: minimum number of flights in every GCD interval (e.g. 1000 flights).
- Percentile interval: the interval between the calculated percentiles of the distributions (e.g. 1 percent).
- · Excluded flights percentage: percentage of flights excluded from the higher and lower end of the distributions to account for outliers (e.g. 10%).

Data Requirement

For each flight trajectory:

- Maximum cruise Flight Level
- Departure airport
- Arrival airport

Data Feed Providers For variant 1: ANSPs; For variant 2: Trajectory data providers (reporting archived actual trajectories based on ADS-B and/or other surveillance data sources) and/or ANSPs

Formula / Algorithm

Reference distributions of the maximum Flight Levels of reference flights are built for every GCD interval. Reference flights are flights on airport pairs which have a great circle distance similar to the great circle distance of the analysed airport pair and which have no flight level capping constraints. The reference distributions are then converted into percentiles for every percentile interval.

Distributions and percentiles for the analysed airport pair are calculated in the same way.

For each percentile interval, the Flight Level value of the airport pair is subtracted from the Flight Level value of the reference. When the airport pair value is higher than the reference value, the result of the subtraction is negative. This might appear as if the flights are more efficient than the reference flights. Nevertheless, the focus is put on finding the inefficiencies, so negative values are set to 0.

The result of the percentile interval is then multiplied by the number of flights corresponding to the percentile interval (e.g. if the width of the percentile interval is 1%, the number of flights corresponding to the percentile interval is 1% of the total number of flights on the airport pair).

Summing up over all percentile intervals gives the total vertical flight inefficiency (number of Flight Levels summed over all flights). The vertical flight inefficiency per flight value is then calculated by dividing the total vertical flight inefficiency by the number of flights on the considered airport pair. The number of flights for this calculation step is 80% of the total number of flights on the airport pair if the excluded flights percentage is 10% (lowest 10% and highest 10% of the flights are not used).

This methodology is done for groups of aircraft types having similar performance to avoid comparing e.g. jet aircraft and turboprop aircraft which have significantly different nominal cruising altitudes.

References & Examples of Use

PRC Performance Review Report (EUROCONTROL 2017)

KPI19	Level-off during descent
Definition	Distance and time flown in level flight after Top of Descent.
Mesurement Units	NM/flight and minutes/flight

Operations Measured Actual IFR flights.

Variant 1: Average distance flown in level flight after Top of Descent Variants

Variant 2: Average time flown in level flight after Top of Descent

Objects CharacterizedThe KPI is typically computed for traffic flows, individual airports, or clusters of airports (selection/grouping based on size and/or geography).

Utility of the KPI

This KPI is intended to give an indication of the amount of level flight during the descent phase. Ideally, there should be no level flight during descents because level flight results in a higher fuel burn and possibly more noise. Ideally, aircraft should be able to descend from Top of Descent until touchdown.

Parameters

- Analysis radius: the radius around the analysed airport within which the descent trajectory is analysed (e.g. 200NM).
- Vertical speed limit: maximum vertical speed used to detect the start and end of a level segment (e.g. 300 feet/minute).
- · Level band limit: altitude band within which data points have to stay to be included in a level segment (e.g. 200 feet).
- Minimum level time: minimum time duration for a level segment to be considered in the results (e.g. 20 seconds).
- . Exclusion box percentage: percentage of the Top of Descent altitude which is used to define the lower altitude of the exclusion box (e.g. 90%). E.g. level segments occurring above the lower altitude limit of the exclusion box and longer than the exclusion box time are excluded from the results.
- Exclusion box time: a level segment in the exclusion box and longer than the exclusion box time is excluded (e.g. 5 minutes).
- . Minimum altitude: the altitude where the level segment detection during the descent ends. The trajectory below this altitude is not analysed (e.g. 1800 feet).

Data Requirement

For each flight trajectory:

- 4D data points (latitude, longitude, altitude and time)
- Arrival airport ARP coordinates

Data Feed Providers Trajectory data providers (reporting archived actual trajectories based on ADS-B and/or other surveillance data sources) and/or ANSPs.

Formula / Algorithm Level segments in the descent trajectory within the analysis radius are detected using the vertical speed limit and level band limit. The methodology considers a data point as the start of a level segment when the following conditions are met:

- the altitude difference with the next data point is less than or equal to the level band limit; and
- the vertical speed towards the next data point is less than or equal to the vertical speed limit.

The level segment ends when the altitude difference between the altitude of the beginning of the level segment and the altitude of a data point is more than the level band limit or when the vertical speed between two consecutive data points is more than the vertical speed limit.

References & Examples of Use

- Comparison of ATM-Related Operational Performance: U.S./Europe (September 2016)
- PRC Performance Review Report (EUROCONTROL 2017)
- European ANS Performance Data Portal